



Mounting instructions: Sidebar series GM/GC/BM/BC/RM/RC

# Opel Movano Renault Master Nissan NV400



SW17 ( 46Nm )




SW13 ( 23Nm )



60 Min.

Version: 1.04 October 2013



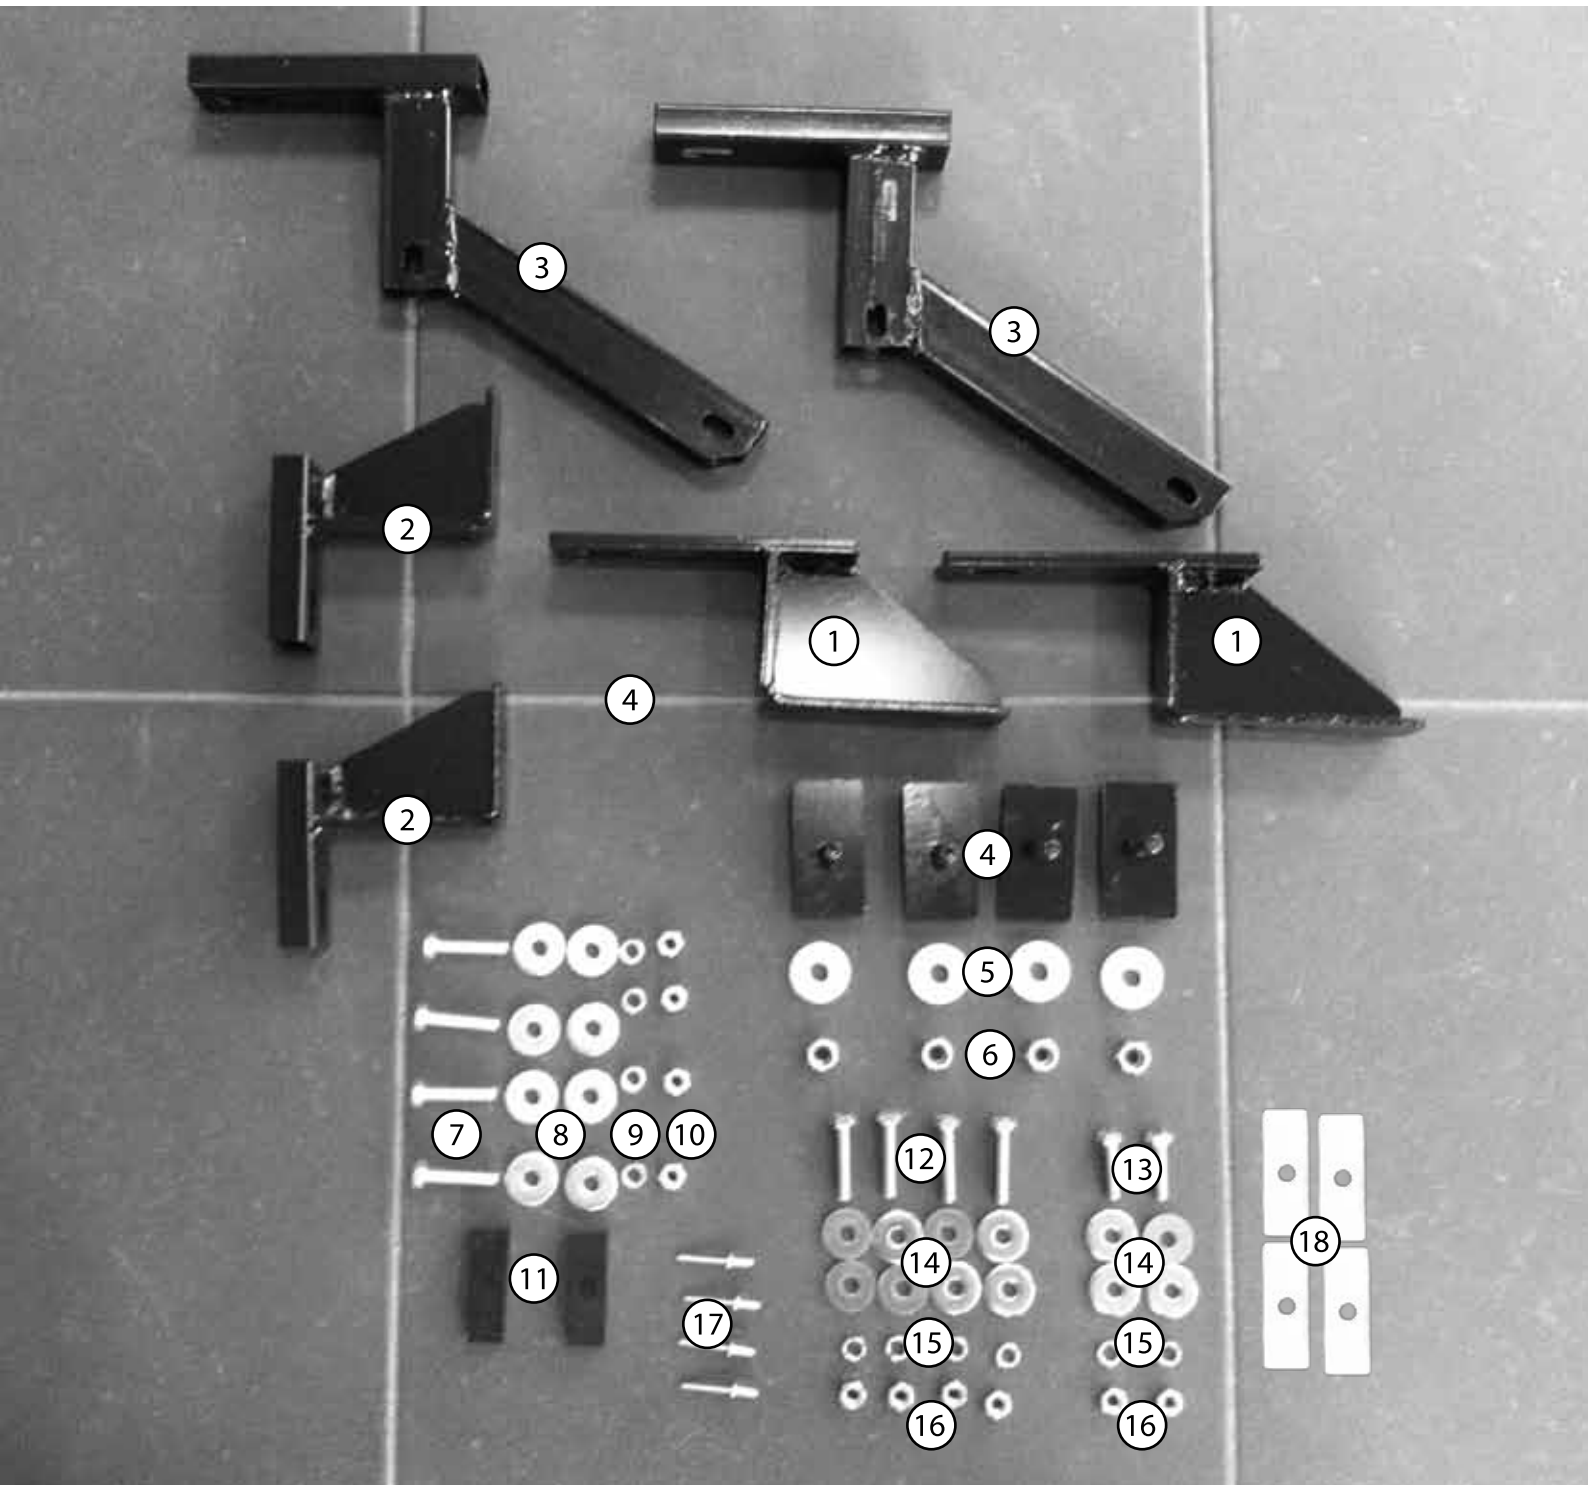

- |   |                                       |    |                                   |
|---|---------------------------------------|----|-----------------------------------|
| 1 | Front bracket                         | 10 | M8 Nut                            |
| 2 | Rear bracket                          | 11 | Plastic Spacer ( left side only ) |
| 3 | Middle bracket ( Only longwheelbase ) | 12 | M8x40 Stainless Bolt              |
| 4 | Big plate M10                         | 13 | M8x30 Stainless Bolt              |
| 5 | M10 Washer                            | 14 | M8 Stainless Washer               |
| 6 | M10 Nut                               | 15 | M8 Stainless Spring Washer        |
| 7 | M8x40 Bolt                            | 16 | M8 Stainless Nut                  |
| 8 | M8 Washer                             | 17 | 4x12 Nail ( BM/BC Series only )   |
| 9 | M8 Spring Washer                      | 18 | M8 Plate                          |

