


M-B VITO / VIANO Sun Visor Mounting instructions

The box should contain following parts:

- | | | | |
|-------------------------|-------|-------------------|-------|
| 1. Premounted sun visor | 1 pc | 2. Roof brackets | 2 pcs |
| 3. 3mm rubber washer | 4 pcs | 4. M 6x16 screws | 4 pcs |
| 5. M 6 x 18mm washer | 4 pcs | 6. Nut cover hat | 8 pcs |
| 7. Cover hat for collar | 8 pcs | 8. Warning labels | 3 pcs |

1. Open the screws from both ends of the sun visor.
2. Glide in the roof bracket between the rubber washer and the center brackets and mount the screws back.
3. Remove the plastic screws from the roof as shown on the photo.

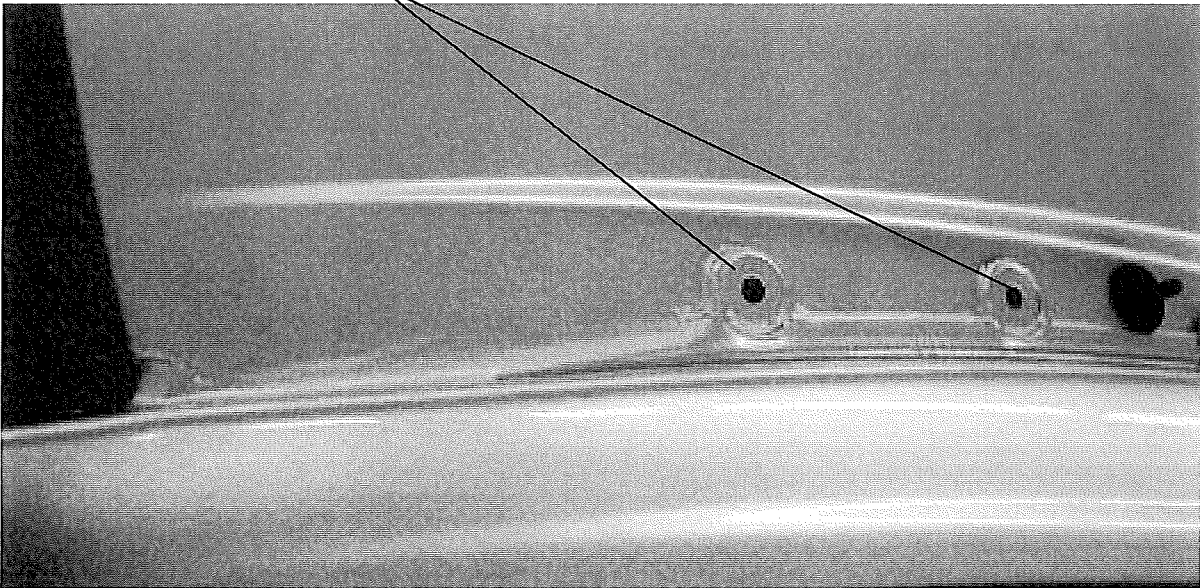

4. Mount the visor on the roof with the M 6 x 16mm screws, washers and rubber washers. (place the rubber washers between the roof and the roof bracket).
5. Check the cross measure of the visor and tighten all screws.
6. Mount the cover hats.
7. Mount the warning label on a place where the driver can see it.

Remember to tighten all screws after few hours of drive!

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h.
If you drive constantly faster than 130 km/h the visor may tear off!

**ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO
RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.**